


UNDERLAYMENT INSIDE CORNER WALL TO DECK

Rubberized Asphalt Adhesive

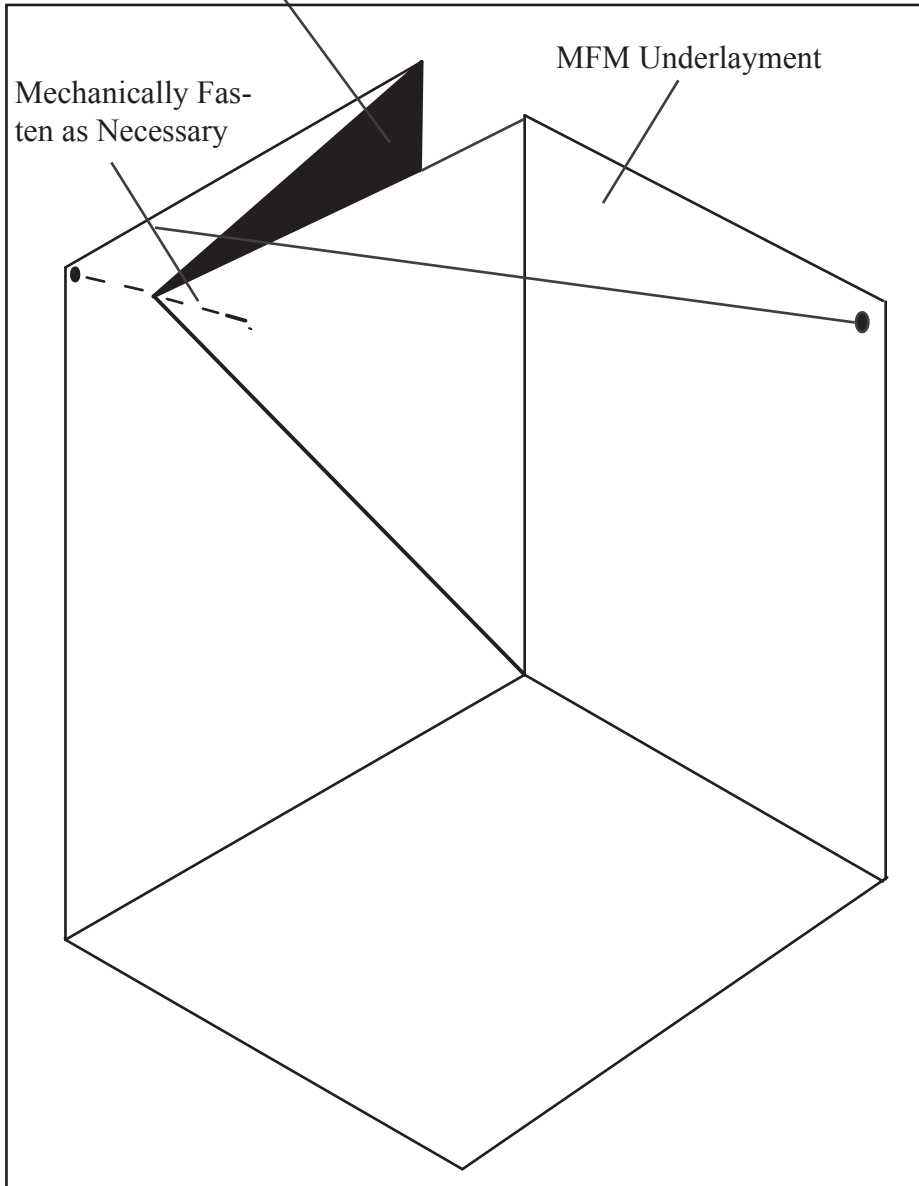


Use a square piece of membrane (12" X 12" minimum) for inside corner.

Angle of corner may vary, adjust folding of the membrane to fit tightly into corner.

Install flashing and roofing per manufacturer's instructions.

Asphalt Adhesive

Scored Release Liner

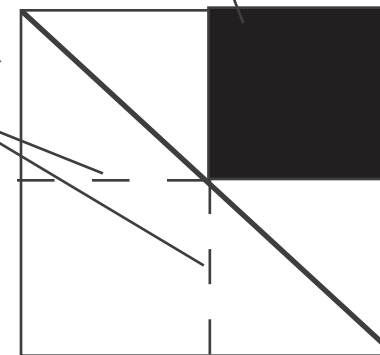

Before Folding, Score Release Liner to Expose Adhesive